


StealthTouch: How to Replace a HDD



1. Turn off system.



2. Remove 2 screws
(see circles.)
3. Pull cover to open (arrow.)

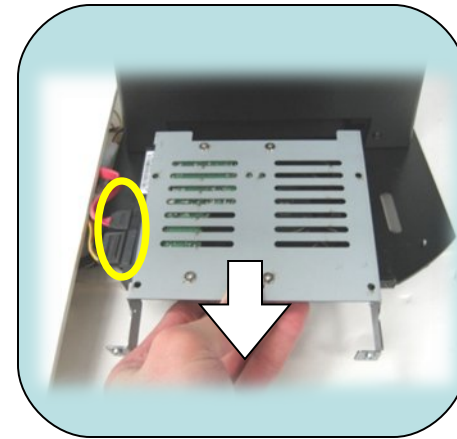

4. Unplug hard drive cables
(see circle.)
5. Pull hard drive bracket To
replace.